


## REVERSING THE AIRLOCK HANDLE DOOR

To change the opening direction of the AIRLOCK locking system door

- Remove the lower hinge and pull the door down.
- Remove the Airlock handle (1) and fit it to the opposite side of the door, observing the centre distances of holes (see plugs).
- Unscrew the locking pin (2) from the refrigerator hinge and screw it in on the opposite side.
- Replace the door, ensuring that the lock works properly.
- Fix the bottom hinge to the opposite side of the refrigerator.

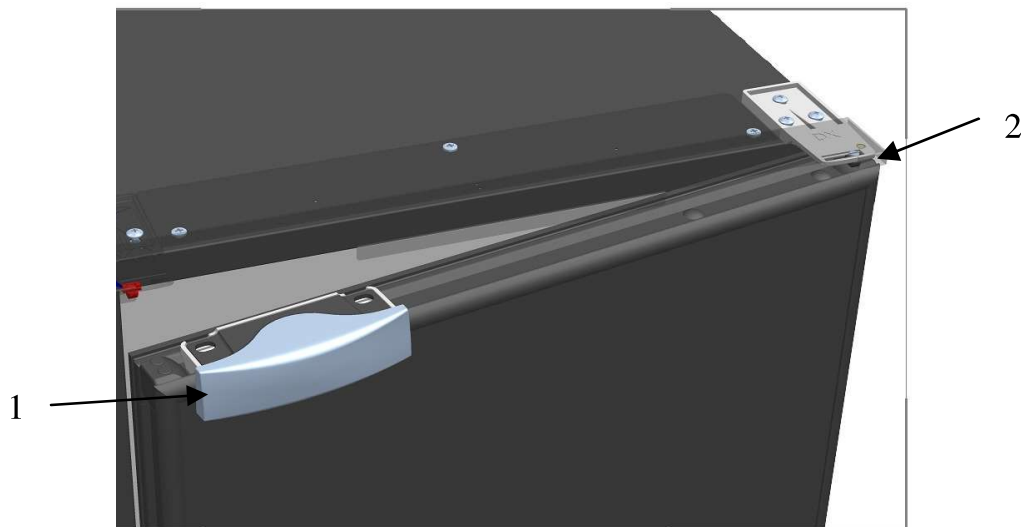

To fit the door in Vent Position (to use with the refrigerator turned off)

- Move the door hinge pin inwards (3).

